


1. Using the correct diameter carbide tipped bit, drill a pilot hole at least 1/4" deeper than anchor embedment.

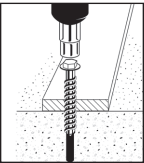

2. Using a 1/2" impact wrench, drive anchor until fully seated.