


1. Drill hole to depth equal to length of Wej-It® Anchor Bolt. Clean hole with compressed air and wire brush.



2. Drive Wej-It® Anchor Bolt into drilled hole through fixture until washer is flush with fixture.

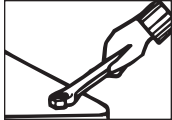

3. Tighten the nut three to five turns past the hand-tight position.