


# Length Selection Guide

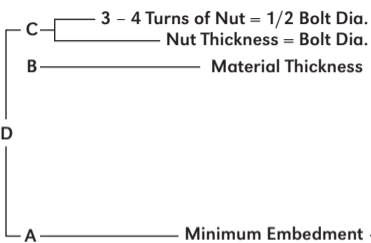

Minimum Embedment (A)  
+ Material Thickness (B)  
+ 1-1/2 x Bolt Dia. (C)

---

= Total Anchor Length (D)